

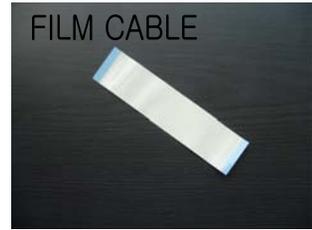


Mercedes-Benz E-Class Interface W211

Installation / Connection Manual

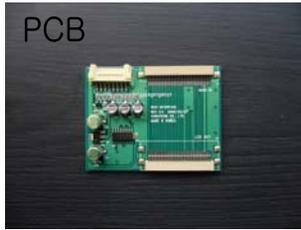


1. Interface module full-set

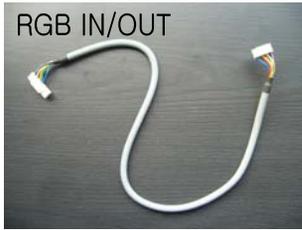

2. Remote function & connection feature




New Type

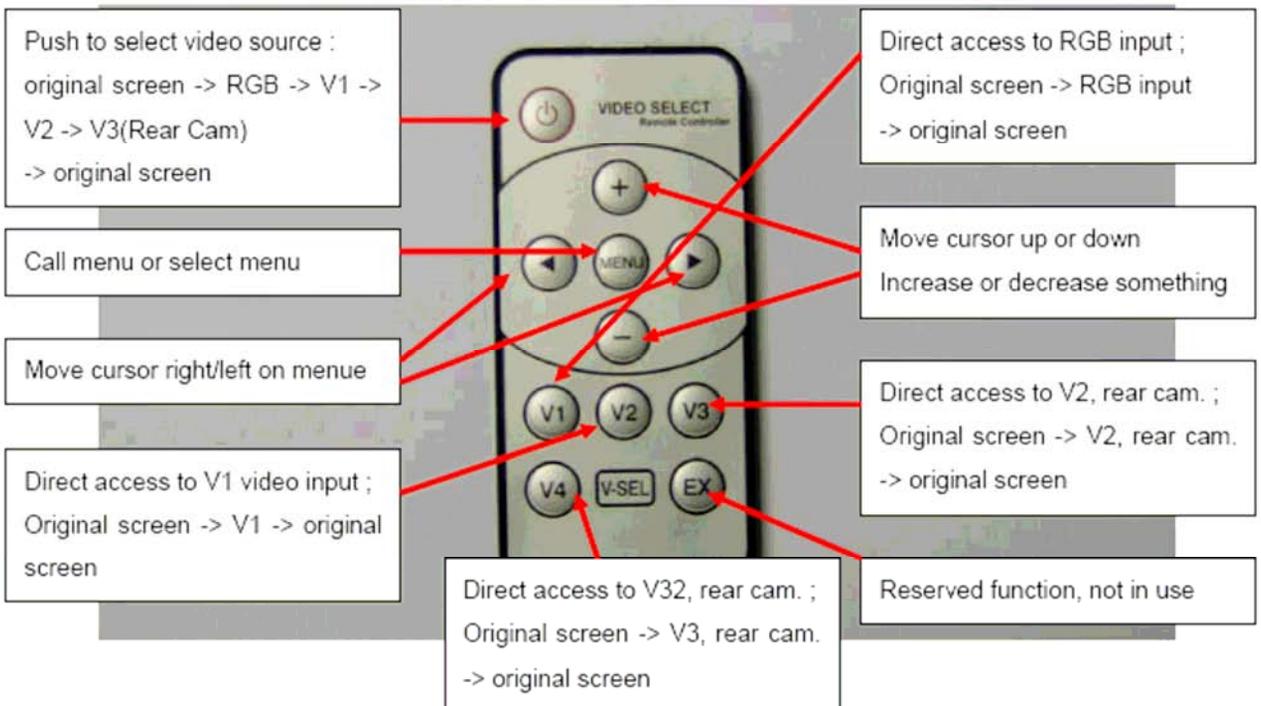

3. Disassemble guide



To connect interface ,
have to release
command system and
Gear box in the circle

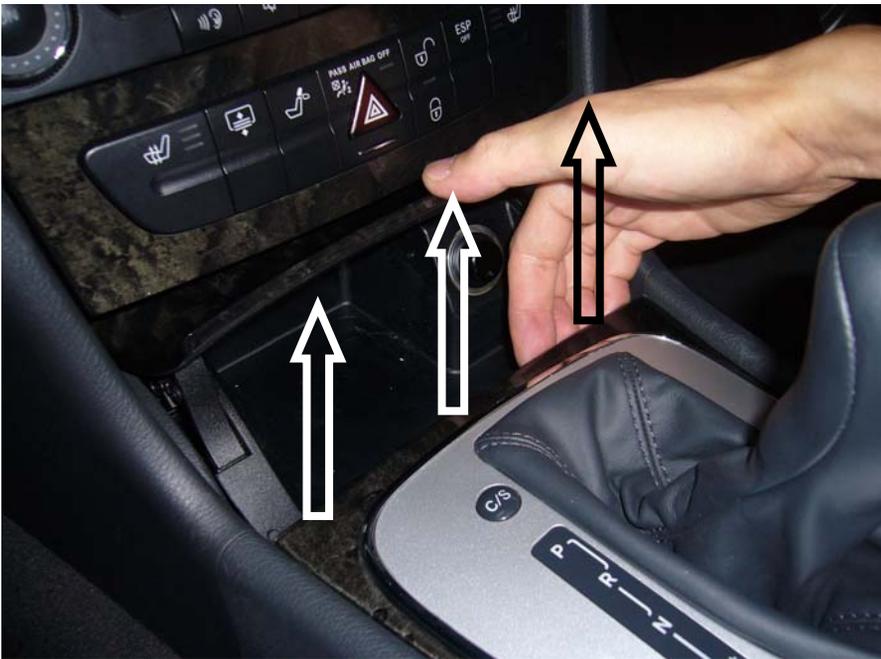

After Shift -Lever on
Drive- mode , Pull out
gearbox as arrow
direction



Release (1st -step) gear-box by hands



Release (2nd -step) gear-box by hands as arrow direction



When you disassemble gear-box, you have to see and treat in the circle carefully




(Caution)
In order to move shift lever on drive-mode, ignition key is ON mode




**Remove in the ashtray
as picture**



**You have to separate
ashtray as arrow
direction completely**

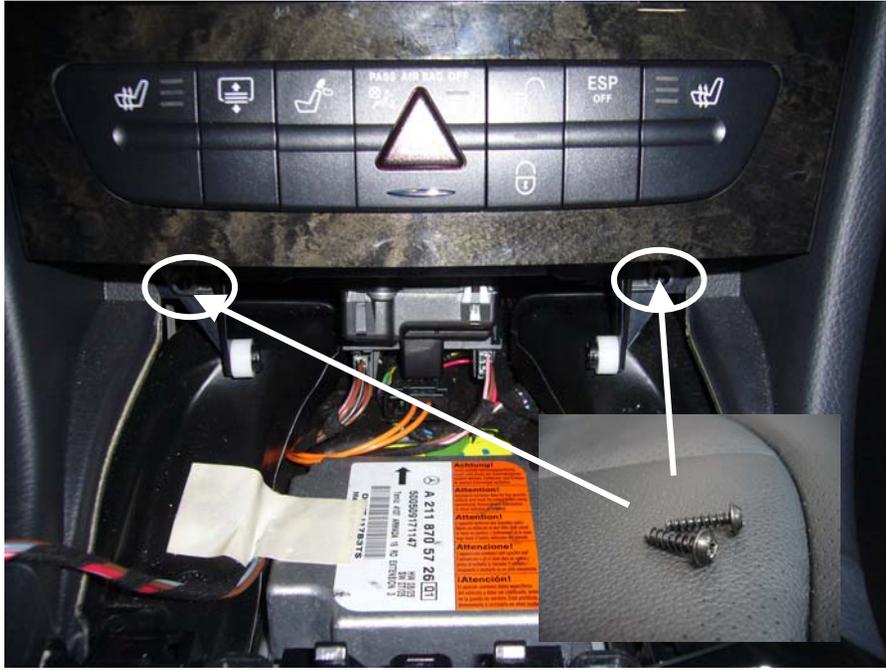

Unscrew on the DVD changer

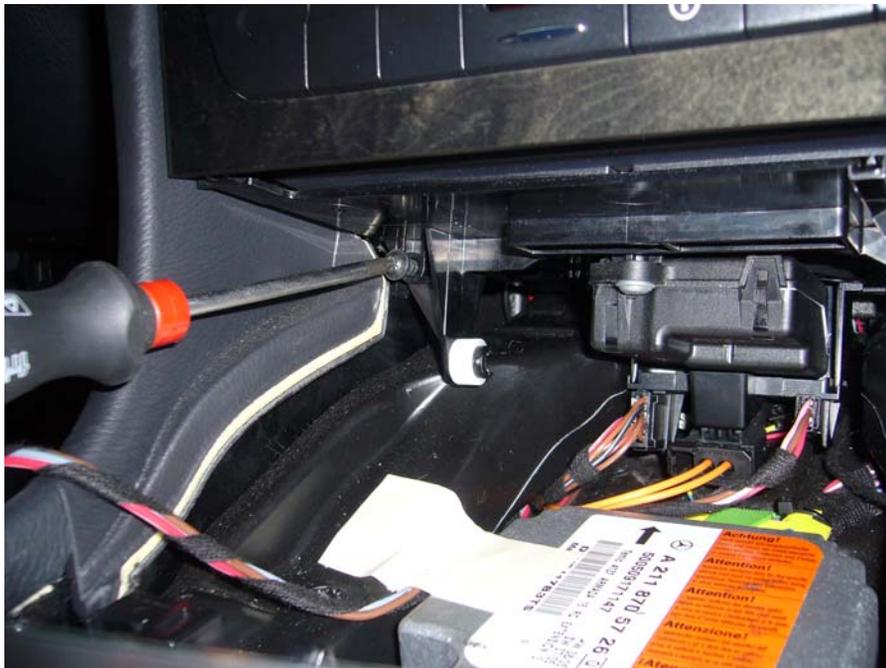

Unscrew above in the 2 circles' screw.



After pull-out DVD Changer
Changer ,release the connector



Just showing status disassembled DVD changer & connectors.



Screw location for disassembling



Release the screw with picture equally

(*Caution) In order to unscrew ,the screw is released and rotate completely

Then you can separate the command system exactly. (*Caution)




Separated rear side of command System




Showing of separated connector status




Showing of screw's location

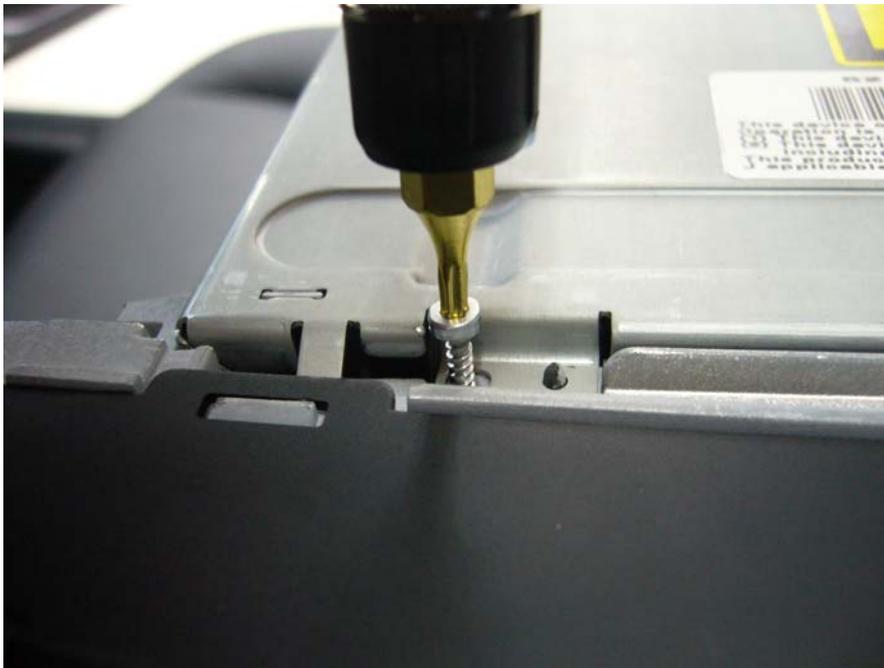


Release of screws

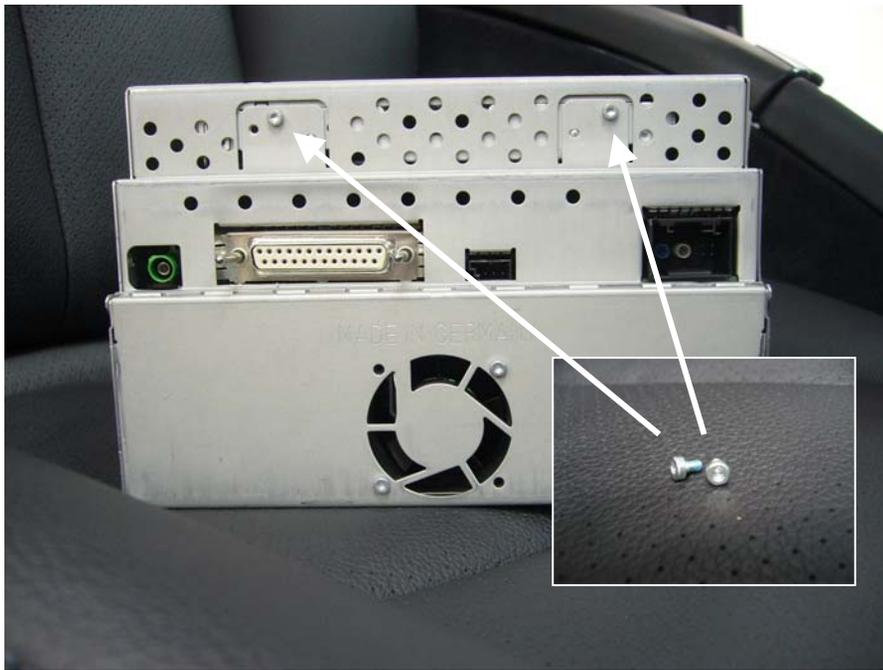

Showing of screw's location

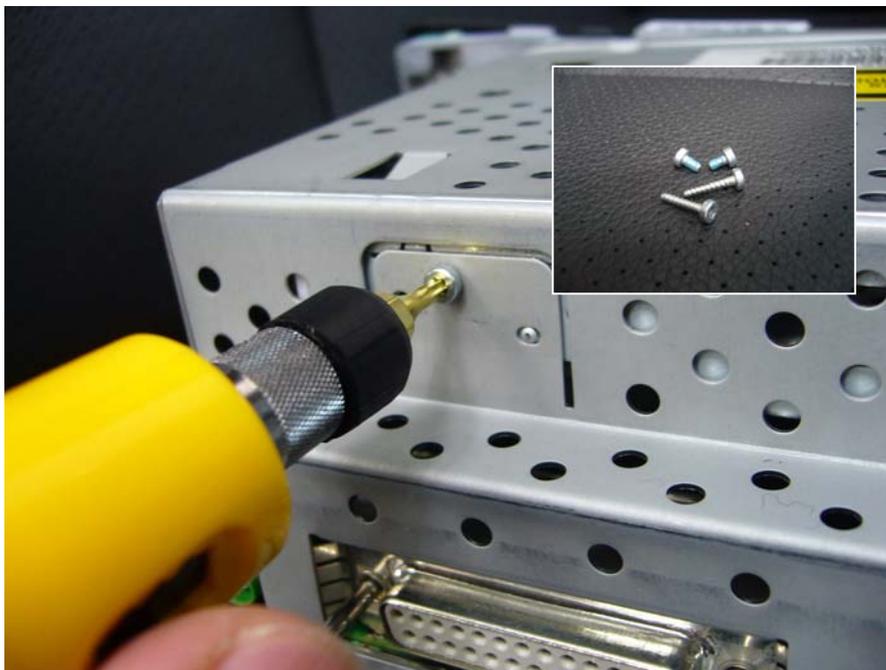

Release screws

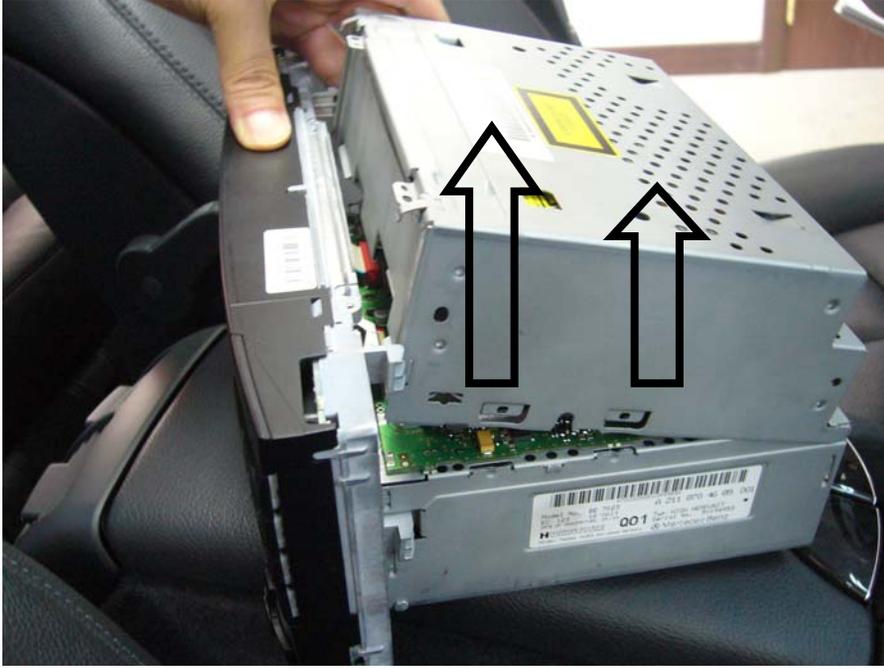


Put out as arrow direction

(*Caution) You must lift on separated part carefully because it connected FTC (film) cable inside.



Showing of status connected FTC cable

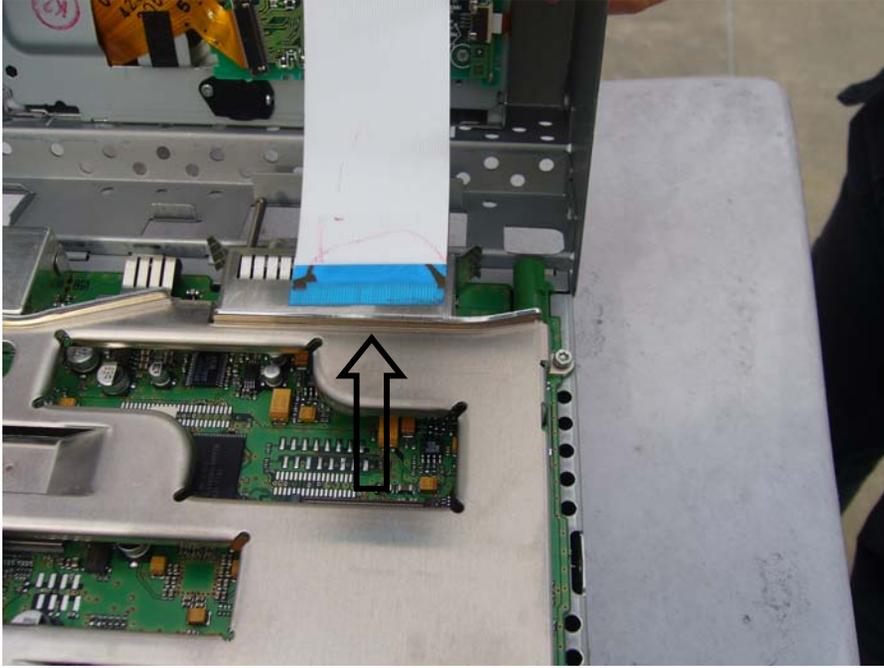

Release FTC cable as arrow direction


Do not harm to FTC Cable and connector

Before release FTC Cable, you exactly have to release locking on the connector housing




(Before connecting Interface' FTC cable)


Status of original cable

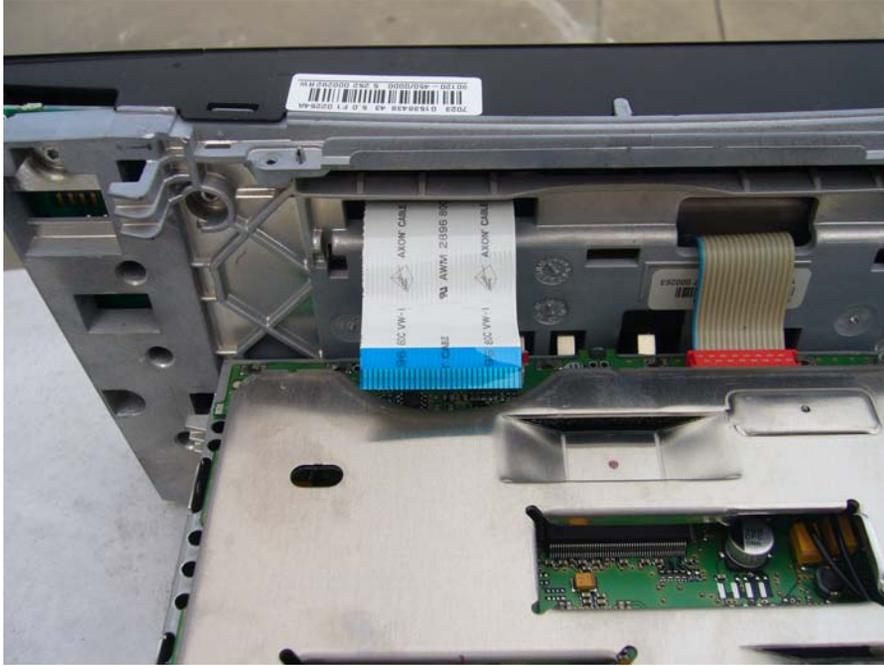


Separate Original FTC Cable

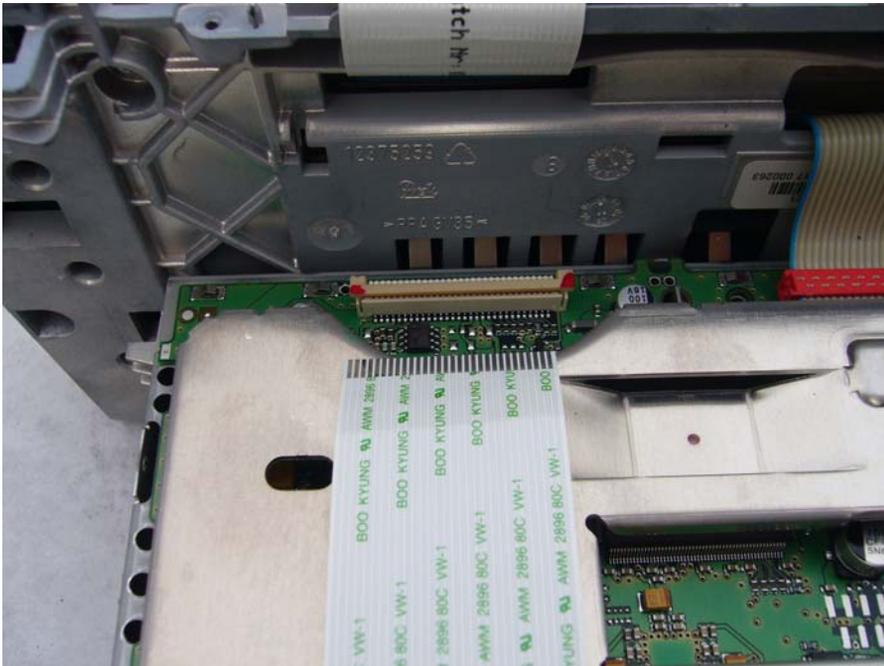


**In order to connect Interface's Cable
The status of original connector**

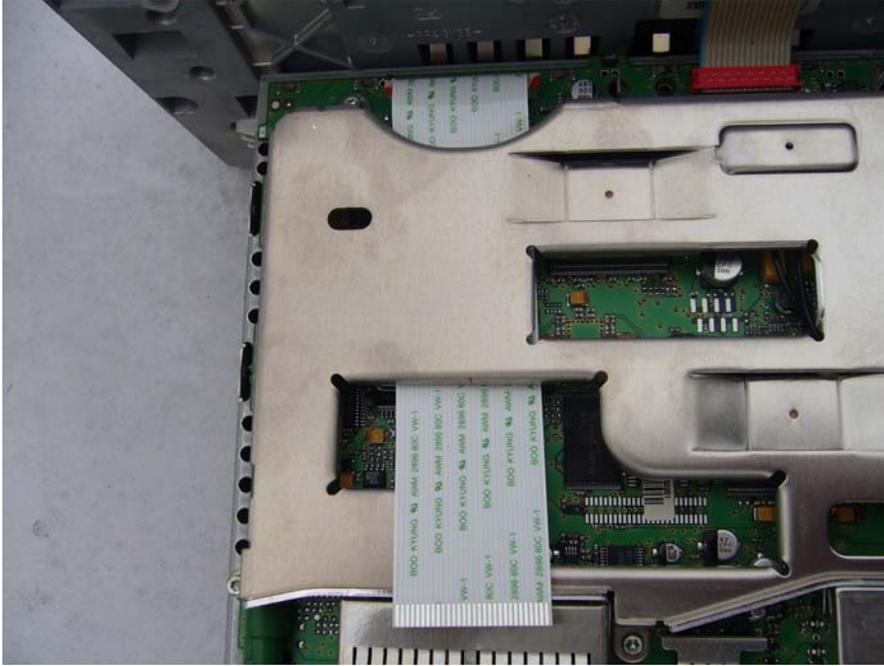


Connected FTC Cable as picture.

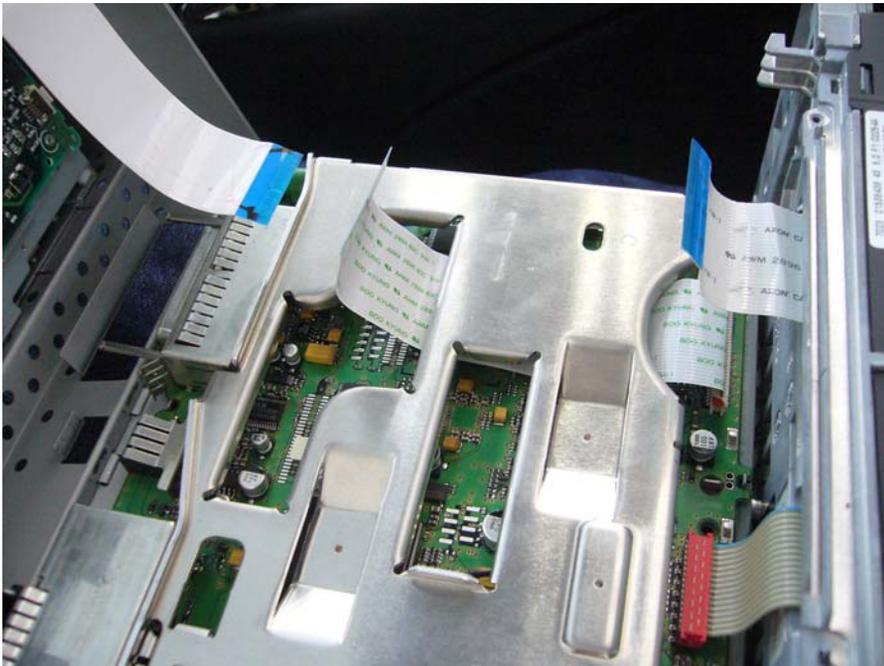

Before connect Interface's FTC cable "Status of connectors"

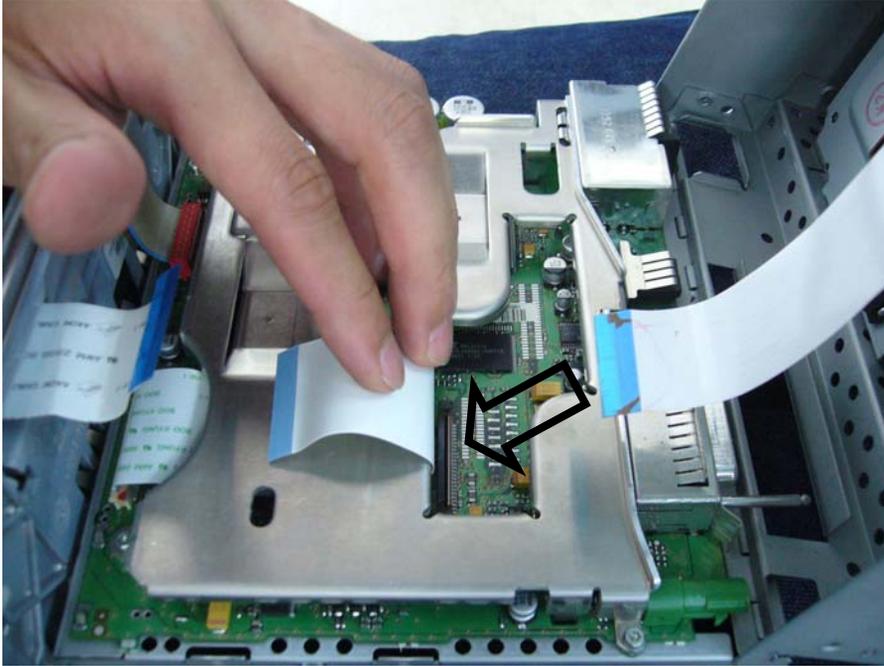

**Connect the FTC cable
As arrow direction.**

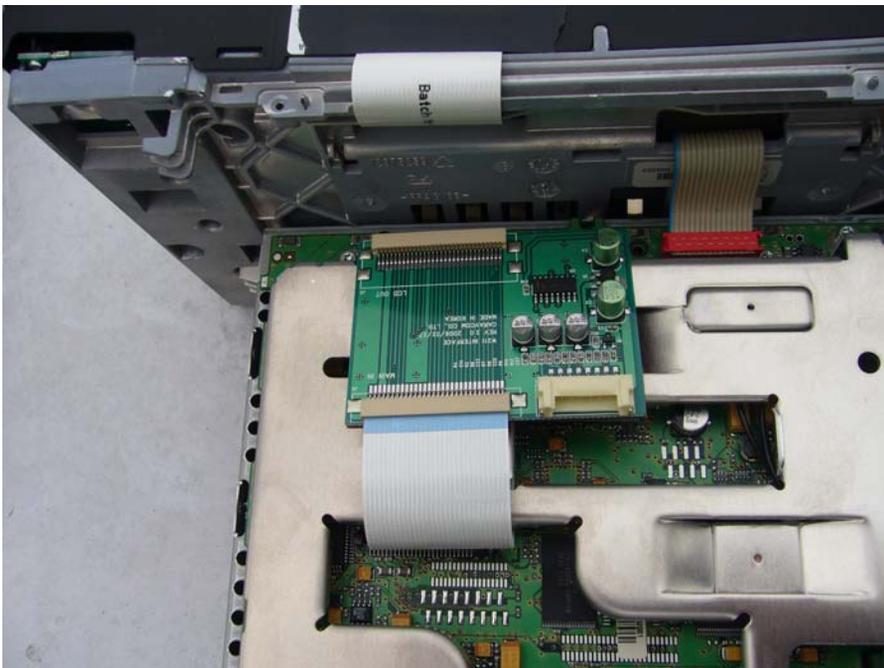

**Small PCB Board is
connected to FTC
cable**

**# Checking to connect
LCD IN - OUT . Do not
change LCD in -out
connector each other**

**# . Do not harm to FTC
Cable and connector**



After connected FTC cable

Carefully ,check in PCB location as same picture.



Connect RGB connector with picture equally. Do not harm RGB cable and check each cable without pressured.



(After linked to extra navigation)


Navigation is on the Command System.



(After linked to extra devices)

Extra device is on the Command System.

BI-MB061
MERCEDES - BENZ
B-Class (W245), E-Class (W211), 2003 ~
C-Class (W203,W204), 2005 ~
R-Class(W251), 2006~
CLS-Class(W219), 2003~
SLK-Class(R171) 2006 ~
CLK-Class(W209),2005~
ML-Class(W164)/Europe, 2006~

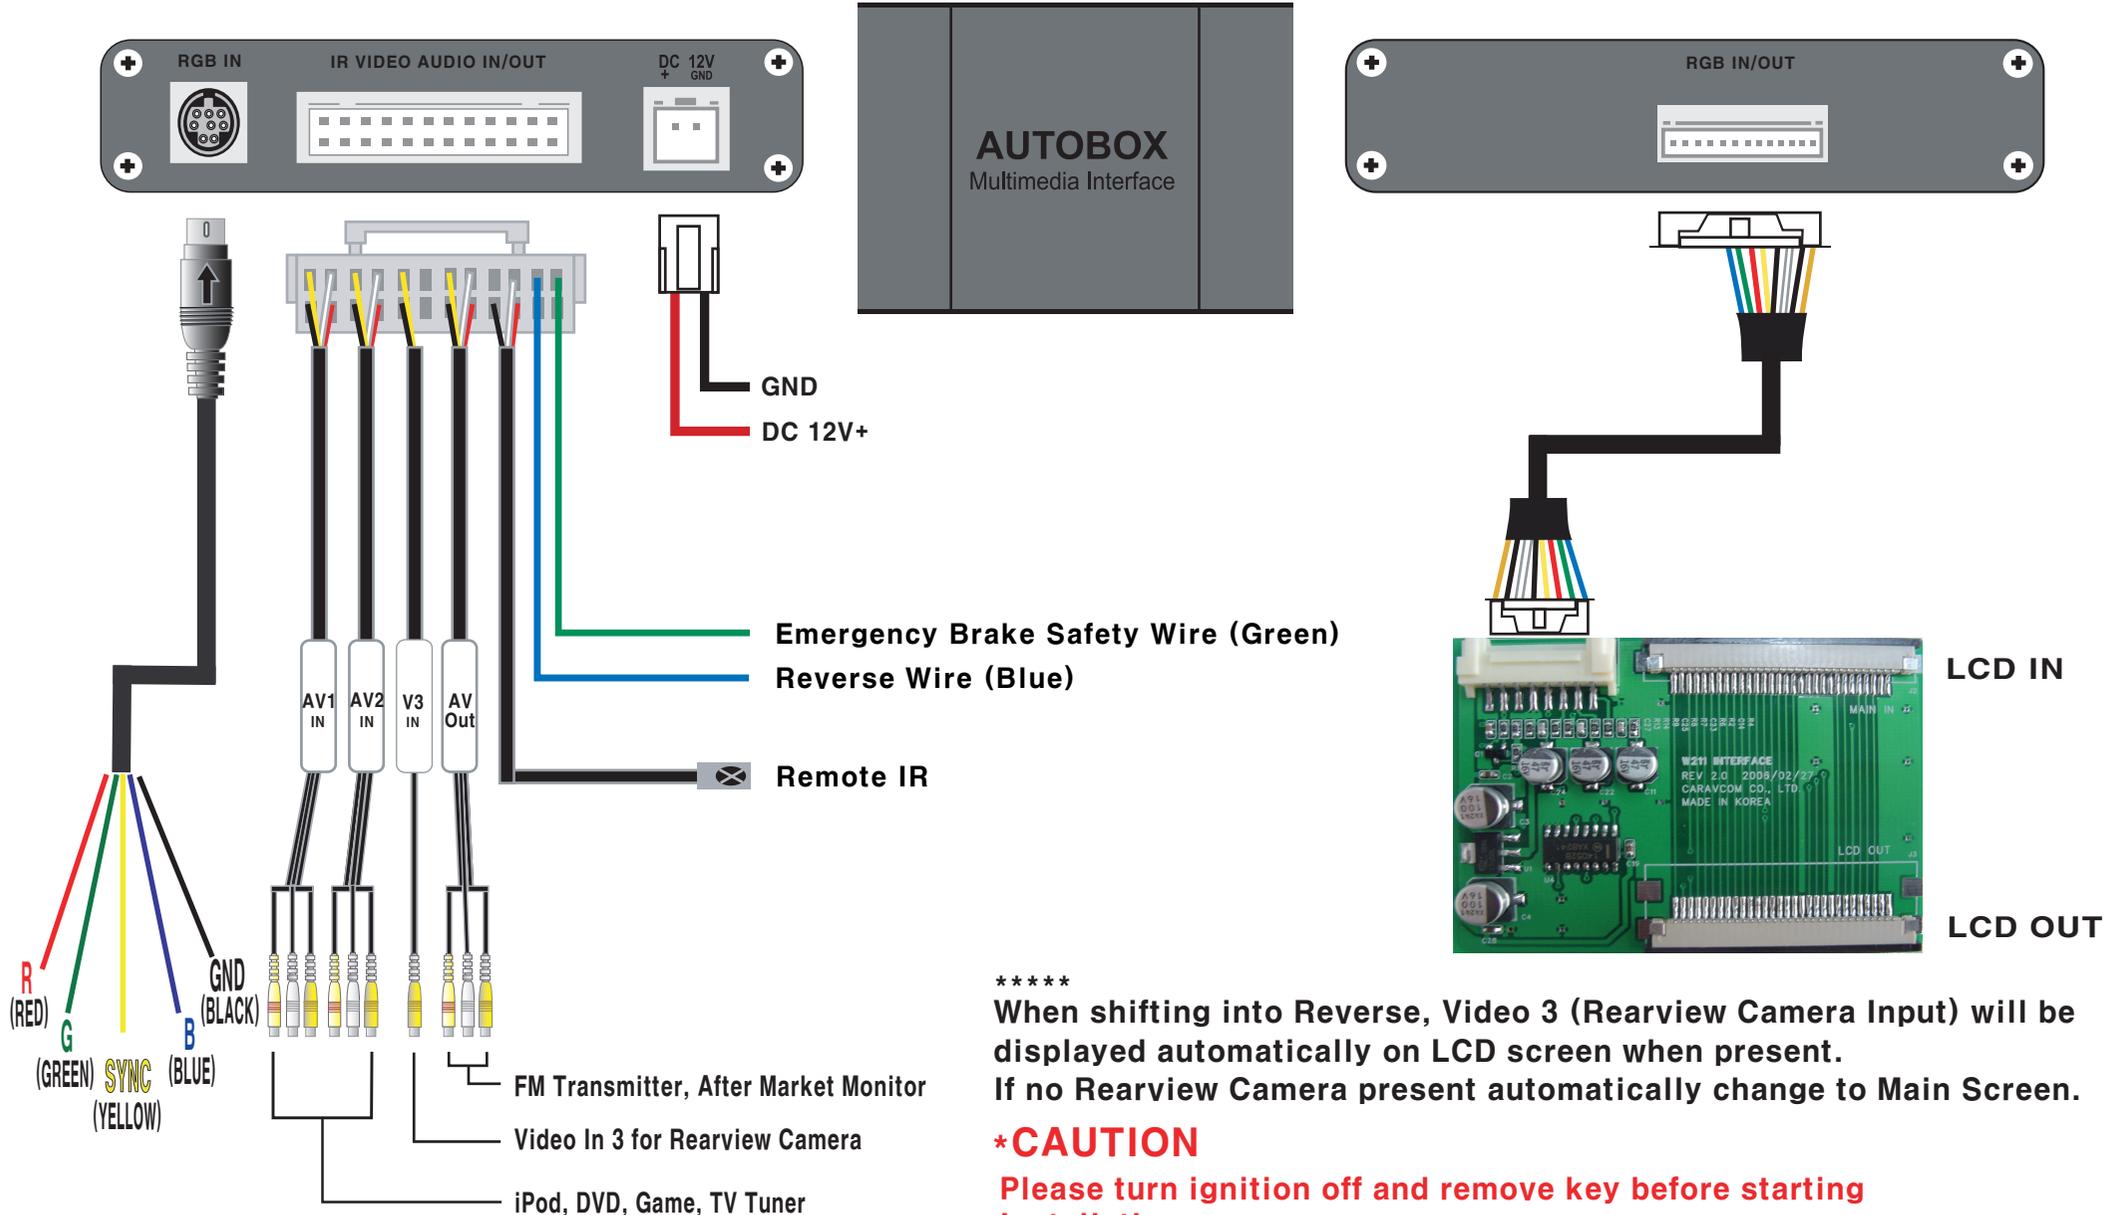

When shifting into Reverse, Video 3 (Rearview Camera Input) will be displayed automatically on LCD screen when present. If no Rearview Camera present automatically change to Main Screen.

***CAUTION**

Please turn ignition off and remove key before starting Installation process.